Midnight

D409

BUFFALO HIDE, FLEECE-LINED

$35.98
MSRP



- Patented Double Wedge design
  Better Dexterity, Comfort and Performance
- Thermal resistant fleece increases R-value adding warmth
- Waterproofing added in tanning process creates water repellency in the leather
- Shirred back (Elastic stretch band for secure fit)
- Purpose placed gussets for longer lasting construction
- Minimized seams equals less hot spots and stitching wear
- Ergonomic design that reduces hand fatigue

TECHNICAL DATA	
Material	Buffalo Hide Leather
Thumb	Wing Thumb Design
Lining	Fleece
Sizes	S-2XL
Packaging	10 dz/case
Case Weight	30-45 lbs

ORDERING INFORMATION		
D409	S	8 54326 00820 8
D409	M	8 54326 00811 6
D409	L	8 54326 00812 3
D409	XL	8 54326 00813 0
D409	2XL	8 54326 00819 2

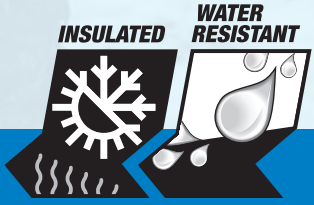

SELECTING A GLOVE **SIZE**

FOR GLOVES **D351, D451, D357, D361, D367, D409, D373, D251, SS644, SL644, SS545, SL545**

SIZE	*HAND SIZE*
XSP	5.5 in - 6 in
XS	6.5 in - 7 in
S	7.5 in - 8 in
M	8.5 in - 9 in
L	9.5 in - 10 in
XL	10.5 in - 11 in
2XL	11.5 in - 10 in
3XL	12.5 in - 13 in

FOR GLOVES **D373, D409, M318, M283, M293, SU375, WP327**

SIZE	*HAND SIZE*
XS	6 in - 6.5 in
S	7 in - 7.5 in
M	8 in - 8.5 in
L	9 in - 9.5 in
XL	10 in - 10.5 in
2XL	11 in - 11.5 in
3XL	12in - 12.5 in

FOR GLOVES **T355, T255**

SIZE	*HAND SIZE*
S	6 in - 6.5 in
M	7 in - 7.5 in
L	8 in - 8.5 in
XL	9 in - 9.5 in
2XL	10 in - 10.5 in
3XL	11 in - 11.5 in

FOR GLOVE **W572**

SIZE	*HAND SIZE*
M	8 in - 8.5 in
L	9 in - 9.5 in
XL	10 in - 10.5 in
2XL	11 in - 11.5 in



Measure the circumference around the palm at the widest point of your hand. If measurement is between sizes, size up.

Glove Care & Maintenance

Conditioning for 1st Time Use

To achieve a perfect fit, Bear Knuckles gloves should conform tightly to your hands when wearing for the 1st time as leather will stretch.

Break-in Steps

Put gloves on
Spritz with water
Wear until dry

Note: If gloves are water/oil resistant, use mink oil or leather conditioner instead of water

Maintenance & Cleaning

All Bear Knuckles gloves are safe to hand or machine wash and dry. After machine washing, gloves will shrink to original size and may be stiff. Follow Break-in Steps above to recondition.